

# Beam Deflector Template for the Citroën XM

SQ351  
Issue1

RIGHT HAND HEADLAMP

TOP

CITROËN XM


ACTUAL SIZE

RIGHT HAND DEFLECTOR  
TEMPLATE

## APPLICATION

1. Ensure the headlamp lens is clean and dry.
2. Cut out the template and place onto the black side of the deflector material.
3. Using the template as a guide cut out the deflector.
4. Remove the protective backing and press the deflector firmly into the position indicated.


## POSITIONING ON HEADLAMP

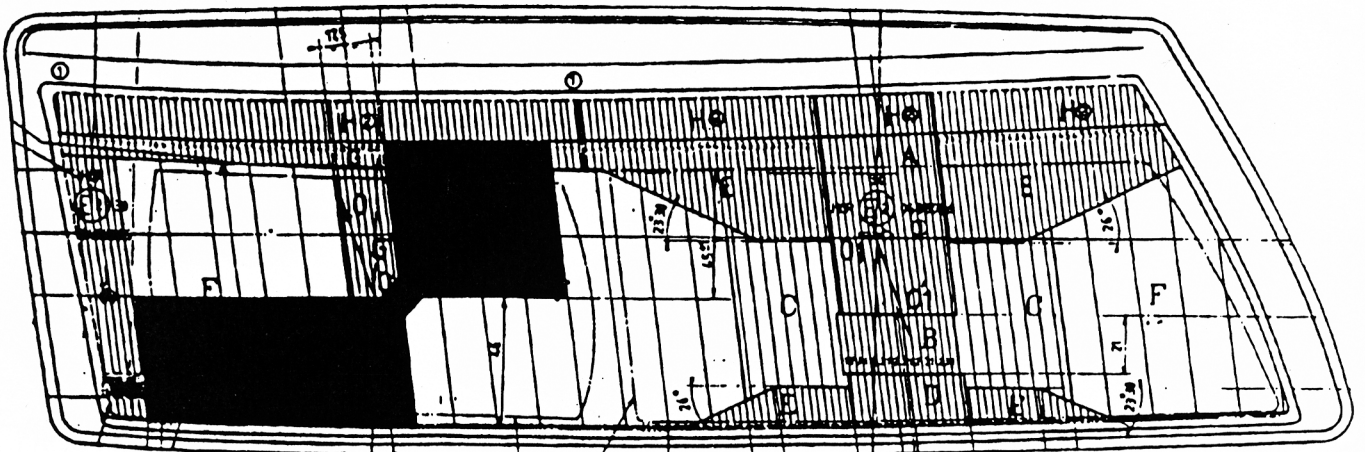

# Beam Deflector Template for the Citroën XM

SQ352  
Issue1

LEFT HAND HEADLAMP

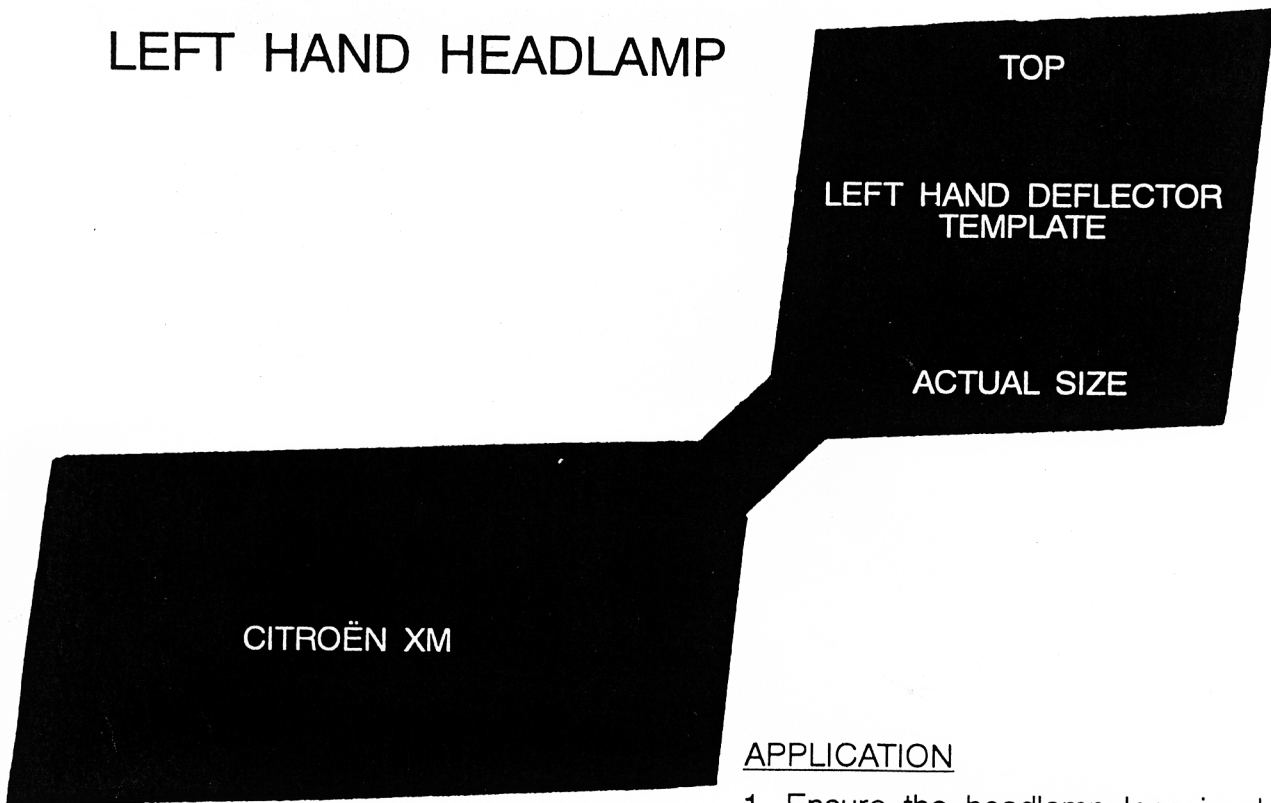

## APPLICATION

1. Ensure the headlamp lens is clean and dry.
2. Cut out the template and place onto the black side of the deflector material.
3. Using the template as a guide cut out the deflector.
4. Remove the protective backing and press the deflector firmly into the position indicated.

## POSITIONING ON HEADLAMP

